


**SIDE SEAM OVERLAP STAPLE DETAIL**  
NO SCALE

6/7

**NOTES:**  
1. SEE AEC PREMIER STRAW® SLOPE APPLICATION DETAIL SHEET FOR PROPER SLOPE INSTALLATION.


**CHANNEL DETAIL**  
NO SCALE

1/7

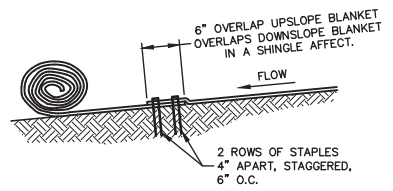


**CHANNEL BLANKET END OF ROLL OVERLAP**  
NO SCALE

7/7

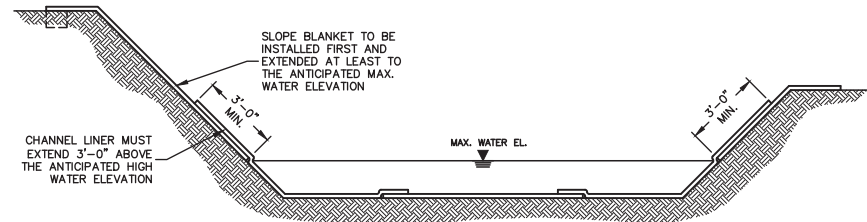


**CHANNEL INSTALLATION METHOD "A"**  
NO SCALE

2/7

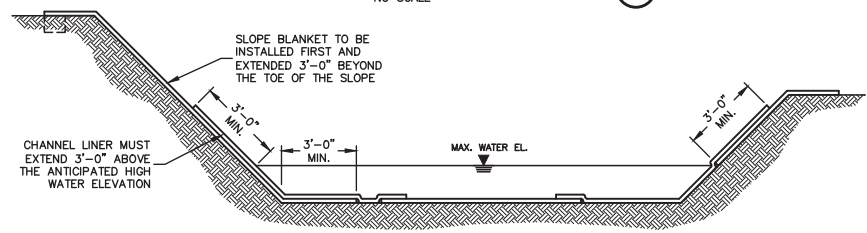


**CHANNEL INSTALLATION METHOD "B"**  
NO SCALE

3/7

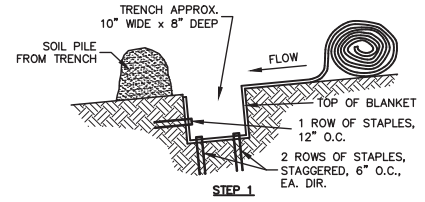


**STEP 1**

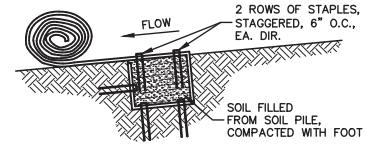

**STEP 2**


**CHANNEL TRENCHING METHOD "A"**  
NO SCALE

8/7

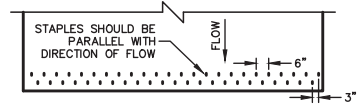

**CHANNEL TERMINATION PLAN**  
NO SCALE

4/7

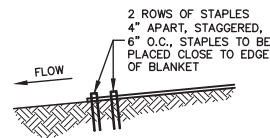


**CHANNEL TERMINATION**  
NO SCALE

5/7



**AEC Premier Straw® Staple Pattern Guide**

For 8 ft wide AEC Premier Straw Erosion Control Blankets  
Adjust horizontal staple spacing for 16 ft wide AEC Premier Straw Erosion Control Blankets


Application	Channel
≤ 1.75 lb/ft <sup>2</sup> (84 Pa) Shear Stress	≤ 7.0 ft/sec (2.1 m/sec) Velocity
Staple Pattern	C

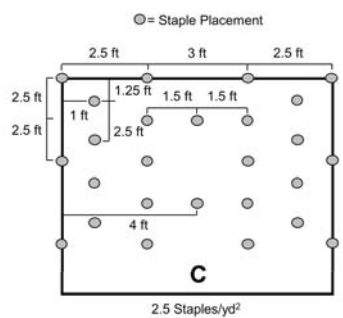

- Notes:**
1. Recommended staples are a minimum 4 in biodegradable E-Staple®, as provided by Americ Excelsior Company, or 6 in wire for cohesive soil and 6 in biodegradable E-Staple®, as provided by American Excelsior Company, or 8 in wire for no cohesive soils.
  2. For best results insert staples so heads are parallel to the flow of water.
  3. Adjust staple pattern so staples are placed in critical channel points (e.g. slope interface, chan bottom) as illustrated below:

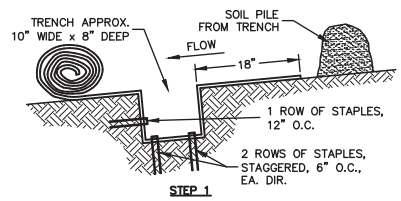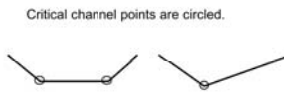

**STEP 1**

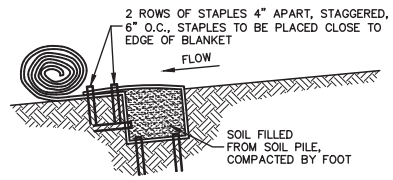

**STEP 2**

**CHANNEL TRENCHING METHOD "B"**  
NO SCALE

9/7

