


**AEC Premier Straw/Coconut™ Staple Pattern Guide**

For 8 ft wide AEC Premier Straw/Coconut Erosion Control Blankets

Application	Slope	
	≤ 3H:1V	≤ 1.5H:1V
Staple Pattern	A	B

● = Staple Placement

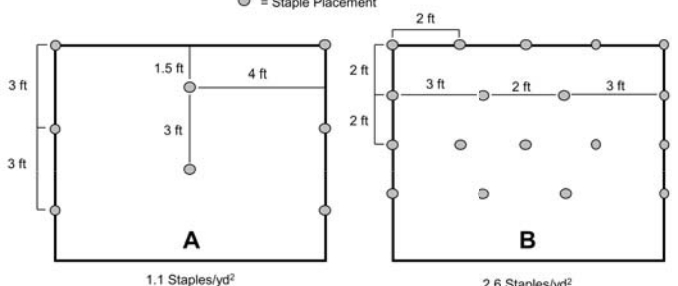

- Notes:**
1. Recommended staples are a minimum 4 in biodegradable E-Staple®, as provided by American Excelsior Company, or 6 in wire for cohesive soils and 6 in biodegradable E-Staple®, as provided by American Excelsior Company, or 8 in wire for non-cohesive soils.
  2. For best results insert staples so heads are parallel to the flow of water.

