



NOTES:
 1. SEE CURLEX® SLOPE APPLICATION DETAIL SHEET FOR PROPER SLOPE INSTALLATION.


SIDE SEAM OVERLAP STAPLE DETAIL
 NO SCALE

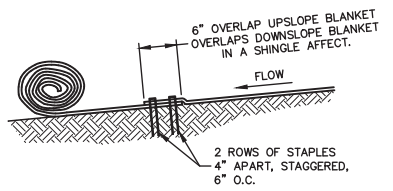


CHANNEL BLANKET END OF ROLL OVERLAP
 NO SCALE

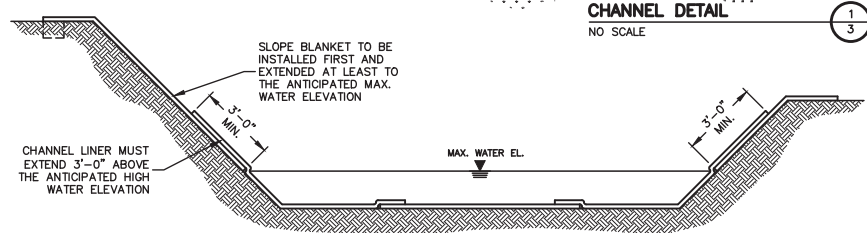


CHANNEL INSTALLATION METHOD "A"
 NO SCALE

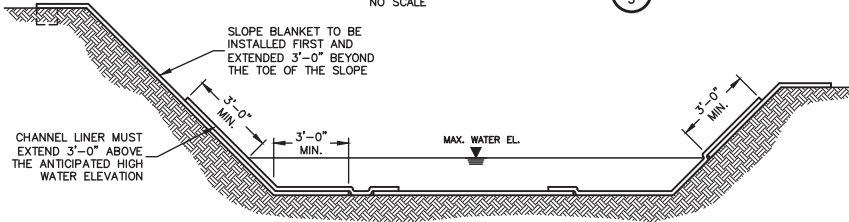

CHANNEL INSTALLATION METHOD "B"
 NO SCALE

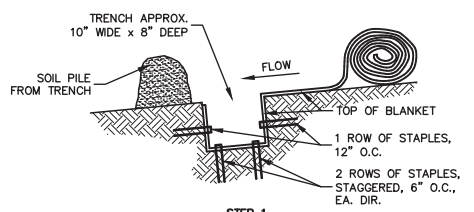


STEP 1

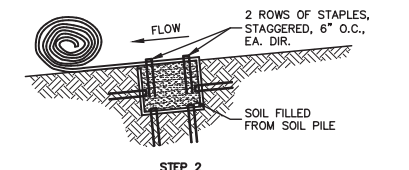


STEP 2


CHANNEL TRENCHING METHOD "A"
 NO SCALE




CHANNEL TERMINATION PLAN
 NO SCALE

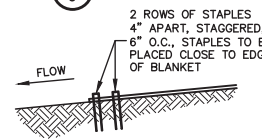

CHANNEL TERMINATION
 NO SCALE

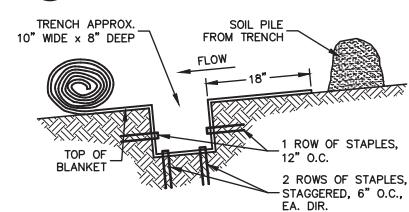

STEP 1

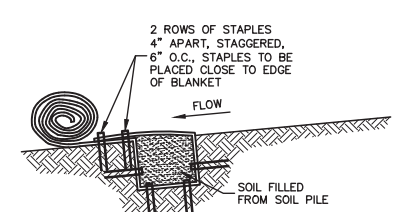

STEP 2

CHANNEL TRENCHING METHOD "B"
 NO SCALE

Curlex® Staple Pattern Guide


For 8 ft wide Curlex Erosion Control Blankets
 Adjust horizontal staple spacing for 4 ft and 16 ft wide Curlex Erosion Control Blankets

Application	Channel
Staple Pattern	$\leq 10.0 \text{ lb/ft}^2$ (480 Pa) Shear Stress $\leq 17 \text{ ft/sec}$ (5.2 m/sec) Velocity C

● = Staple Placement

Notes:

1. Recommended staples are a minimum 4 in biodegradable E-Staple®, as provided by American Excelsior Company, or 6 in wire for cohesive soils and 6 in biodegradable E-Staple®, as provided by American Excelsior Company, or 8 in wire for non-cohesive soils.
2. For best results insert staples so heads are parallel to the flow of water.
3. Adjust staple pattern so staples are placed in critical channel points (e.g. slope interface, channel bottom) as illustrated below.

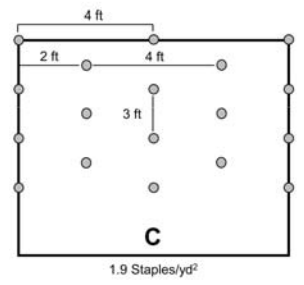

Critical channel points are circled.

