
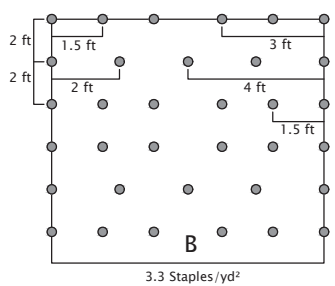


TriNet® Coconut Turf Reinforcement Mat (TRM) Staple Pattern Guide

For 8 ft wide TriNet TRM
Adjust horizontal staple spacing for 16ft wide TRM

Application	Slope	
	≤ 3H:1V	≤ .5H:1V
Staple Pattern	A	B

● = Staple Placement

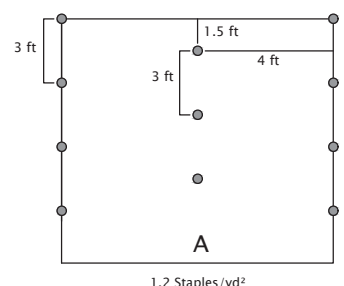

- Notes:
- For cohesive soil use a 6 in wire staple and for non-cohesive soil use an 8 in wire staple.
 - For best results insert staples so heads are parallel to the flow of water.

