



SLOPE DETAIL
NO SCALE

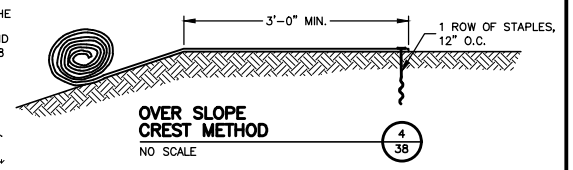


OVER SLOPE CREST METHOD
NO SCALE

DO NOT NEED TO TRENCH BLANKET IN IF IT CAN BE EXTENDED A MINIMUM OF 3'-0" OVER THE CREST OF THE SLOPE.

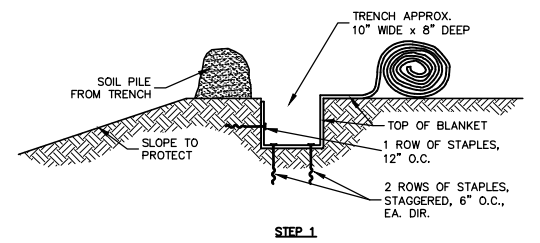


STEP 1

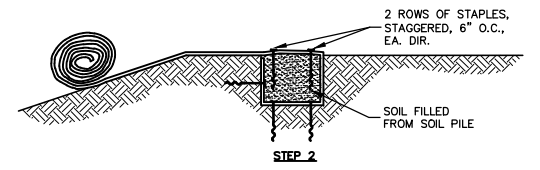


STEP 2


SLOPE TRENCHING METHOD "A"
NO SCALE

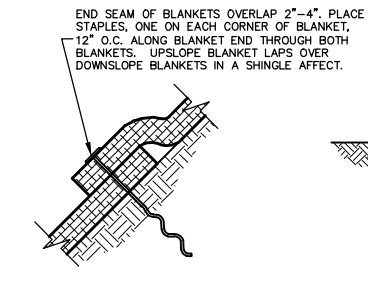


END ROLL OVERLAP
NO SCALE

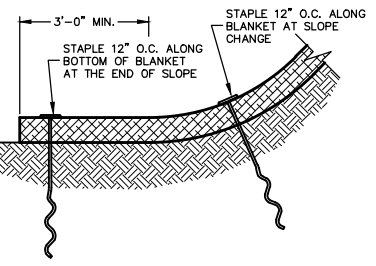

BOTTOM OF SLOPE TERMINATION IF INSTALLED 3' BEYOND THE TOE OF SLOPE
NO SCALE

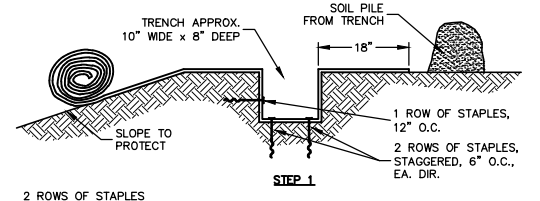

STEP 1

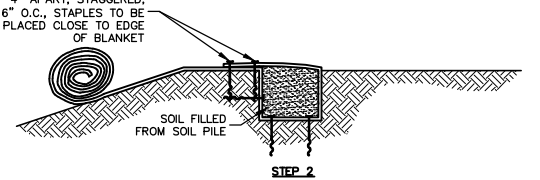

STEP 2


SLOPE TRENCHING METHOD "B"
NO SCALE

TriNet® Recyclex® Turf Reinforcement Mat (TRM) Staple Pattern Guide


For 8 ft wide TriNet TRM
Adjust horizontal staple spacing for 16ft wide TRM

Application	Slope	
	≤ 3H:1V	≤ 5H:1V
Staple Pattern	A	B

● = Staple Placement

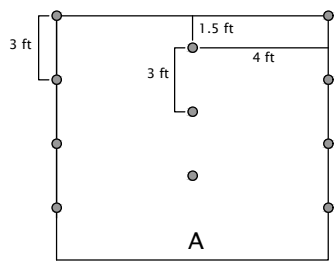


1.2 Staples/yd²

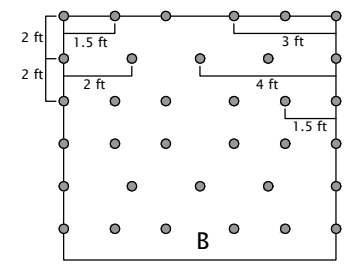


3.3 Staples/yd²

- Notes:
- For tough/cohesive soil, use TL-TA2 Gripple twist anchors; for moderate/non-cohesive soil, use TL-TA1 Gripple twist anchors.

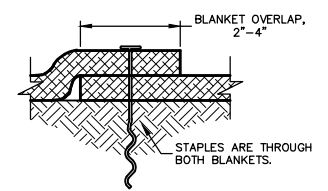

SIDE SEAM OVERLAP STAPLE DETAIL
NO SCALE



BOTTOM OF SLOPE TERMINATION IF INSTALLATION 3' BEYOND TOE OF SLOPE IS NOT POSSIBLE
NO SCALE

