
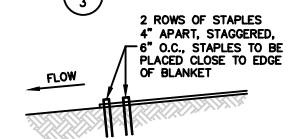

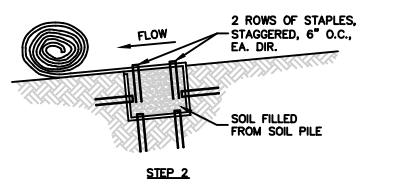
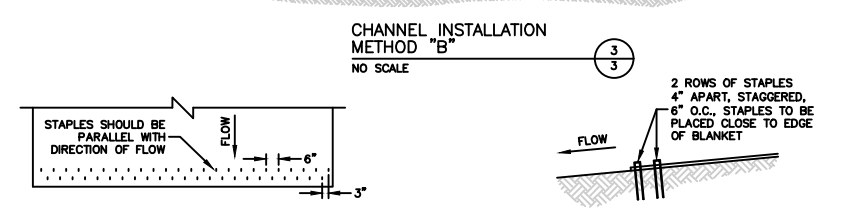
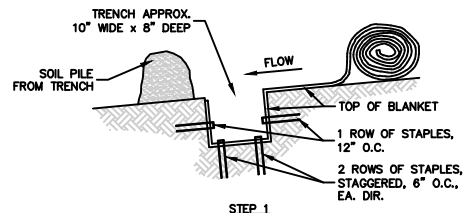
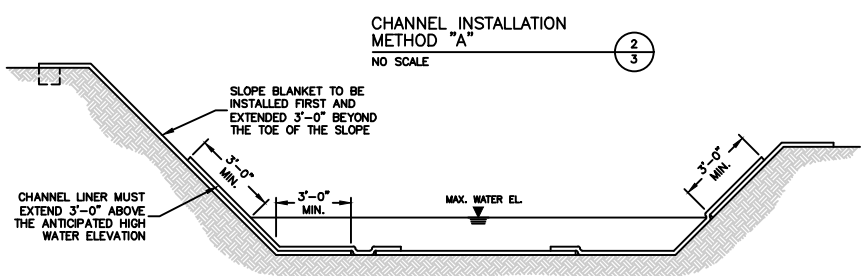
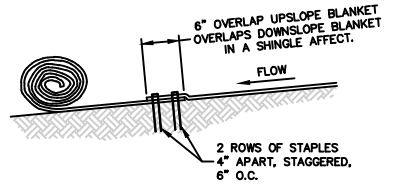



NOTES:
 1. SEE CURLEX® SLOPE APPLICATION DETAIL SHEET FOR PROPER SLOPE INSTALLATION.

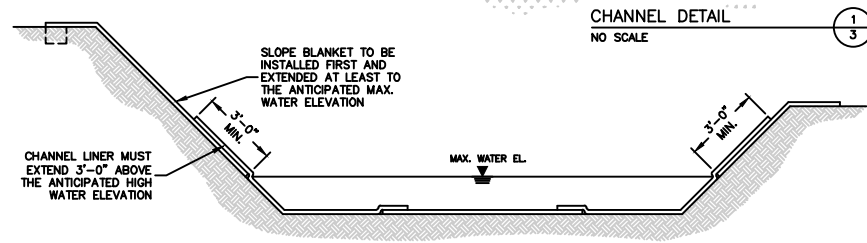

Curlex® Staple Pattern Guide
 For 8 ft wide Curlex Erosion Control Blankets
 Adjust horizontal staple spacing for 4 ft and 16 ft wide Curlex Erosion Control Blankets

Application	Channel
	$\leq 10.0 \text{ lb/ft}^2$ (480 Pa) Shear Stress $\leq 17 \text{ ft/sec}$ (5.2 m/sec) Velocity
Staple Pattern	C

● = Staple Placement

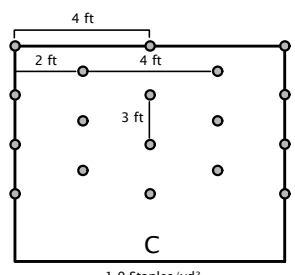

- Notes:**
1. Recommended Staples are minimum 4 in biodegradable E-Staple®, as provided by American Excelsior Company, or 6 in wire for cohesive soils and 6 in biodegradable E-staple®, as provided by American Excelsior Company, or 8 in wire for non-cohesive soils.
 2. For best results insert staples so heads are parallel to the flow of water.
 3. Adjust staple pattern so staples are placed in critical channel points (e.g. slope interface, channel bottom) as illustrated below.

