



SLOPE DETAIL
NO SCALE

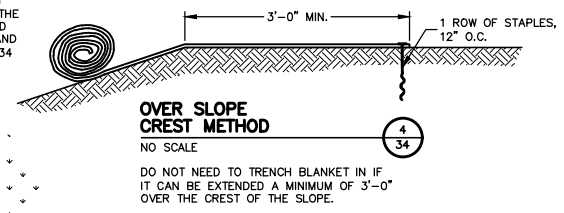


OVER SLOPE CREST METHOD
NO SCALE

DO NOT NEED TO TRENCH BLANKET IN IF IT CAN BE EXTENDED A MINIMUM OF 3'-0" OVER THE CREST OF THE SLOPE.

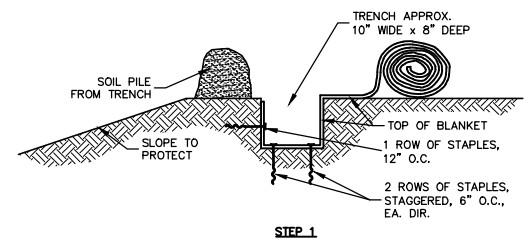


STEP 1

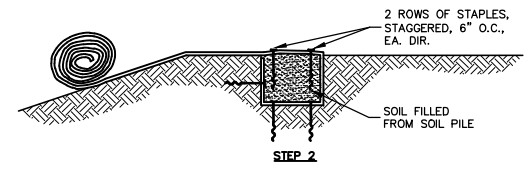


STEP 2


SLOPE TRENCHING METHOD "A"
NO SCALE

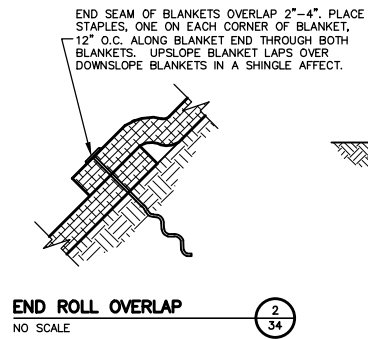

END ROLL OVERLAP
NO SCALE

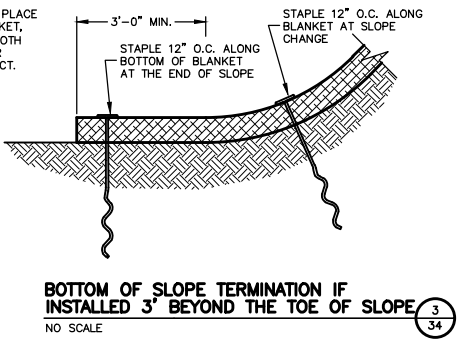

BOTTOM OF SLOPE TERMINATION IF INSTALLED 3' BEYOND THE TOE OF SLOPE
NO SCALE

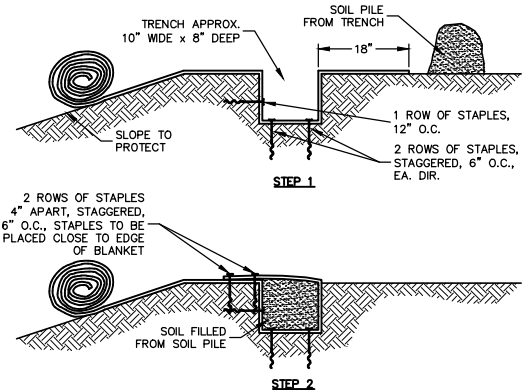

STEP 1

STEP 2


SLOPE TRENCHING METHOD "B"
NO SCALE

TriNet® Coconut Turf Reinforcement Mat (TRM) Staple Pattern Guide


For 8 ft wide TriNet TRM
Adjust horizontal staple spacing for 16ft wide TRM

Application	Slope	
	≤ 3H:1V	≤ .5H:1V
Staple Pattern	A	B

○ = Staple Placement

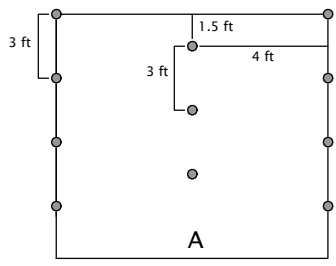


1.2 Staples / yd²

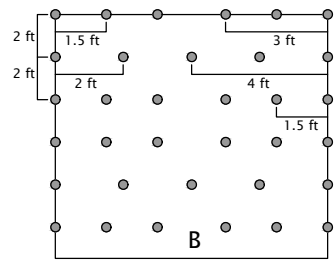


3.3 Staples / yd²

- Notes:
- For tough/cohesive soil, use TL-TA2 Gripple twist anchors; for moderate/non-cohesive soil, use TL-TA1 Gripple twist anchors.
 - Adjust staple pattern so staples are placed in critical slope points (e.g. slope change)



BOTTOM OF SLOPE TERMINATION IF INSTALLATION 3' BEYOND TOE OF SLOPE IS NOT POSSIBLE
NO SCALE

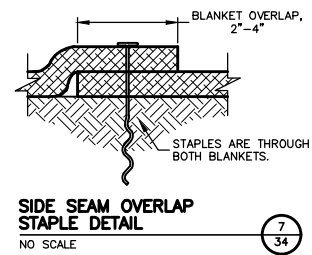

SIDE SEAM OVERLAP STAPLE DETAIL
NO SCALE

