



SIDE SEAM OVERLAP STAPLE DETAIL
NO SCALE

NOTES:
1. SEE AEC PREMIER STRAW® SLOPE APPLICATION DETAIL SHEET FOR PROPER SLOPE INSTALLATION.


CHANNEL DETAIL
NO SCALE

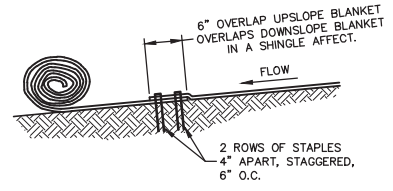


CHANNEL BLANKET END OF ROLL OVERLAP
NO SCALE

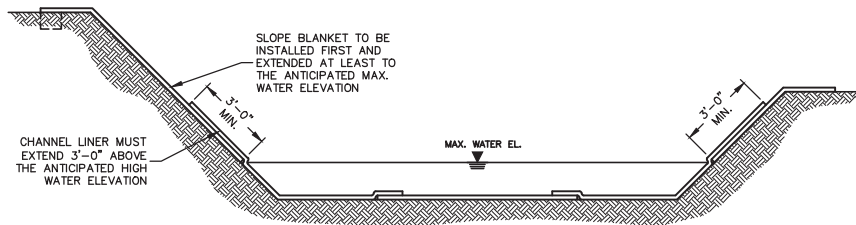


CHANNEL INSTALLATION METHOD "A"
NO SCALE

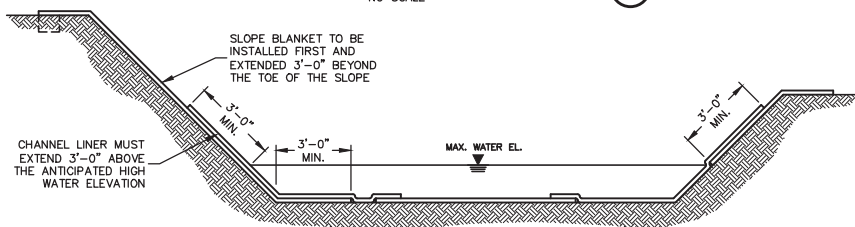

CHANNEL INSTALLATION METHOD "B"
NO SCALE

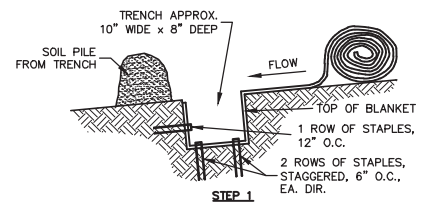


STEP 1

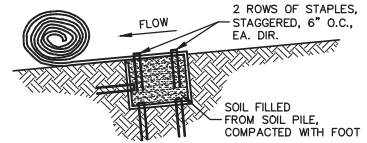


STEP 2

CHANNEL TRENCHING METHOD "A"
NO SCALE

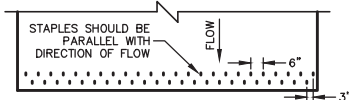

CHANNEL TERMINATION PLAN
NO SCALE

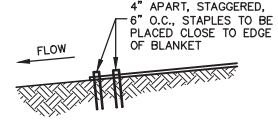


CHANNEL TERMINATION
NO SCALE

AEC Premier Straw® Staple Pattern Guide


For 8 ft wide AEC Premier Straw Erosion Control Blankets
Adjust horizontal staple spacing for 16 ft wide Premier Straw Erosion Control Blankets

	Channel
Application	≤ 1.75 lb/ft ² (84 Pa) Shear Stress ≤ 7.0 ft/sec (2.1 m/sec) Velocity
Staple Pattern	C

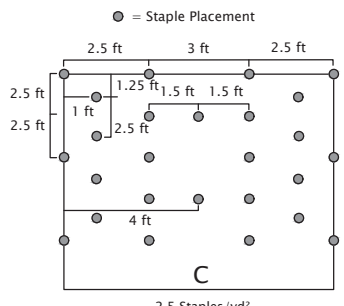


- Notes:**
1. Recommended staples are minimum 4 in biodegradable E-Staple®, as provided by American Excelsior Company, or 6 in wire for cohesive soils and 6 in biodegradable E-staple®, as provided by American Excelsior Company, or 8 in wire for non-cohesive soils.
 2. For best results insert staples so heads are parallel to the flow of water.
 3. Adjust staple pattern so staples are placed in critical channel points (e.g. slope interface, channel bottom) as illustrated below.

Critical channel points are circled.

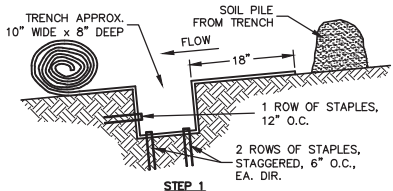

STEP 1

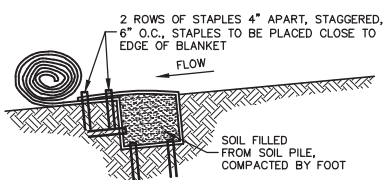

STEP 2

CHANNEL TRENCHING METHOD "B"
NO SCALE

